

(1) Front A-Arm Guards:

- 2 – Fixation (Dir+Esq)
- 2 – Screw M6x45 – 7380
- 2 – Screw M8x25 – 7380
- 4 – Screw M8x30 – 7380
- 4 – Clamp C 023
- 2 – Washer M6
- 6 – Washer M8
- 2 – Nylock Nut M6
- 6 – Nylock Nut M8

(2) Front Diff Skid Plate:

- 1 – Drill bit Ø5.25
- 6 – Screw M6x20 – 7500
- 2 – Screw M6x25 - 7500
- 1 – Screw M6x20 – 6921
- 4 – Special Washer B 048
- 1 – Bushing Ø35xØ8,5x5 B 041
- 2 – Bushing Ø20xØ6,5x8 B 018
- 1 – Wide Flange Washer M6
- 1 – Nylock Nut M6

(3) Front Skid Plate:

- 2 – Screw M6x20 – 6921
- 8 – Screw M8x20 – 7380
- 2 – Special Washer B 048
- 2 – Washer M6 Ø30
- 2 – Nylock Nut M6
- 8 – Join Plate D 009

(4) Front Guards:

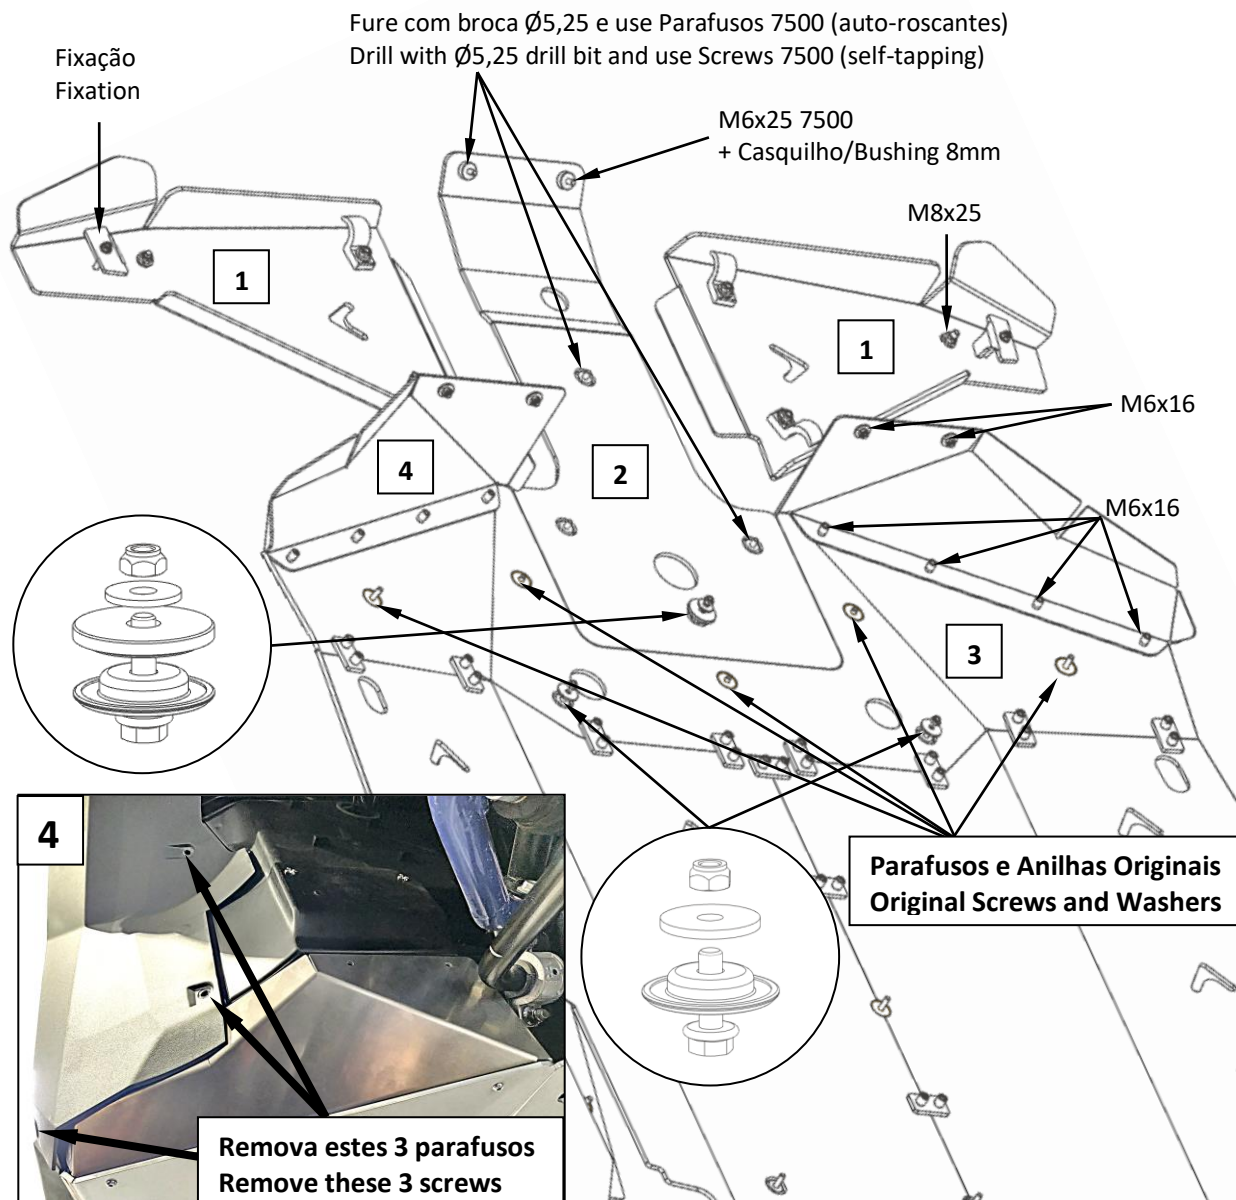
- 8 – Screw M6x16 – 7380
- 4 – Screw M6x16 – 7380 Black
- 4 – Wide Flange Washer M6 Blk
- 4 – Nylock Nut M6

POLARIS RZR PRO XP**Ed. 1 | 110056305NA****Kit Completo ALU****Complete Kit ALU**

xrw
RACING PARTS



**REMOVA A PELÍCULA
PROTECTORA
REMOVE THE
PROTECTIVE FILM**

**(1) Prot. Triângulos Frente:**

- 2 – Fixação (Dir+Esq)
- 2 – Paraf. M6x45 – 7380
- 2 – Paraf. M8x25 – 7380
- 4 – Paraf. M8x30 – 7380
- 4 – Abraçadeira C 023
- 2 – Anilha M6
- 6 – Anilha M8
- 2 – Porca Freitada M6
- 6 – Porca Freitada M8

(2) Prot. Diferencial Frente:

- 1 – Broca Ø5.25
- 6 – Paraf. M6x20 – 7500
- 2 – Paraf. M6x25 - 7500
- 1 – Paraf. M6x20 – 6921
- 4 – Anilha Especial B 048
- 1 – Casq. Ø35xØ8,5x5 B 041
- 2 – Casq. Ø20xØ6,5x8 B 018
- 1 – Anilha Aba Larga M6
- 1 – Porca Freitada M6

(3) Prot. Motor Frente:

- 2 – Paraf. M6x20 – 6921
- 8 – Paraf. M8x20 – 7380
- 2 – Anilha Especial B 048
- 2 – Anilha Aba Larga M6 Ø30
- 2 – Porca Freitada M6
- 8 – Patilha de União D 009

(4) Placas Frontais:

- 8 – Paraf. M6x16 – 7380
- 4 – Paraf. M6x16 – 7380 Preto
- 4 – Anilha Aba Larga M6 Preto
- 4 – Porca Freitada M6 Preto

(5) Central Skid Plates:

3 – Screw M6x20 – 7500
22 – Screw M8x20 – 7380
3 – Special Washer B 048
10 – Join Plate D 009

(6) Rear Skid Plate:

6 – Screw M8x20 – 7380

(7) Rear Trailing Arm Guards:

4 – Screw M8x30 - 933
4 – Screw M8x80 – 933
2 – Bushing $\varnothing 18 \times \varnothing 8.5 \times 42$ B051
2 – Bushing $\varnothing 25 \times \varnothing 8.5 \times 48$ B055
8 – Wide Flange Washer M8
4 – Nylock Nut M8

(5) Prot. Motor Central:

3 – Paraf. M6x20 – 7500
22 – Paraf. M8x20 – 7380
3 – Anilha Especial B 048
10 – Patilha de União D 009

(6) Prot. Motor Inferior:

6 – Paraf. M8x20 – 7380

(7) Prot. Triângulos Trás:

4 – Paraf. M8x30 - 933
4 – Paraf. M8x80 – 933
2 – Casq. $\varnothing 18 \times \varnothing 8.5 \times 42$ B 051
2 – Casq. $\varnothing 25 \times \varnothing 8.5 \times 48$ B 055
8 – Anilha Aba Larga M8
4 – Porca Freitada M8

